

Tradename: AC WonderShroom

Code: 21029

CAS #: 84650-60-2 & 999999-99-4 (or) 68917-13-5 & 999999-99-4 (or) 68917-13-5 & N/A (or) 9057-02-7

Test Request Form #: 12018

Lot #: N240425D

Sponsor: *Active Concepts, LLC; 107 Technology Drive Lincolnton, NC 28092*

Study Director: *Daniel Shill*

Principal Investigator: *Hannah Stade*

Test Performed:

Reactive Oxygen Species Scavenging Assay

Introduction

Low levels of intracellular oxidative stress are produced during normal physiological functions. However, UV irradiation, pollutants, foreign substances, and aging elicit unrestricted increases in reactive oxygen species (ROS). These deregulated augmentations in oxidative stress lead to an acceleration of DNA mutation, cellular senescence, advanced glycation end products, protein oxidation, and collagen degradation. Moreover, when intrinsic antioxidant capacities are reduced, such as during aging, an imbalance between pro- and anti-oxidant systems further accentuates these hallmarks of cellular aging.

Accordingly, a ROS Scavenging Assay was conducted to assess the *in vitro* effect of **AC WonderShroom** to scavenge unnecessary oxidative stress in dermal fibroblasts. Caffeine, a standardized component in **AC WonderShroom**, was also tested to demonstrate the superior nature of **AC WonderShroom** compared to caffeine alone. Attenuating excessive ROS preserves cellular homeostasis and blunts intrinsic and extrinsic age-related declines in skin cell function.

Assay Principle

Two cell-permeant dyes, CellROX™ Orange Reagent and Hoechst, were utilized in conjunction to provide a specific and quantitative method for determining ROS levels. CellROX™ Orange Reagent fluoresces brightly when bound to ROS indicating oxidative stress, and Hoechst fluoresces when bound to nuclear DNA to indicate cellular nuclei. By displaying the relative fluorescent units (RFU) from the CellROX™ Orange Reagent (ROS Signal) as a function of Hoechst (Nuclear Signal), ROS can be quantified and normalized at the cellular level. To elicit supraphysiological mitochondrial- and non-mitochondrial-derived levels of oxidative stress, the cells were exposed to Antimycin A, a complex III inhibitor of the mitochondrial electron transport chain.

Materials

A. Kit:	CellROX™ Orange Reagent (ThermoFisher Scientific, C10443)*
B. Incubation Conditions:	37°C, 5% CO ₂ , and 95% relative humidity (RH)
C. Equipment:	Forma humidified incubator; ESCO biosafety laminar flow hood; Light microscope; Synergy HT Microplate Reader; Pipettes
D. Cell Line:	Normal Human Neo-Natal Dermal Primary Fibroblasts (ATCC PCS-201-010)*
E. Media/Buffers:	Fibroblast Basal Medium (PCS-201-030)*; Fibroblast Growth Kit (PCS-201-041)*; Ethanol; Phosphate Buffered Saline (PBS)
F. Reagents:	Hoechst 33342 (ThermoFisher Scientific, 62249)*; Antimycin A (Sigma Aldrich, A8674)*
G. Culture Plate:	96 Well Black Side/Clear Bottom Tissue Culture Treated Microplates
H. Software:	Excel Analysis Toolpak (Microsoft)
I. Other:	Sterile disposable pipette tips

*Or suitable alternatives, subject to change without notice based off vendor availability

Methods

Human dermal fibroblasts were seeded into a 96-well tissue culture microplate and grown to 80%-90% confluency in complete media (CM). 0.01%, 0.05% and 0.1% concentrations of **AC WonderShroom** in CM were added to cells and placed at 37°C. Additionally, a solution of 0.0025% Caffeine was added to cells. This concentration is equivalent to the maximum standardized amount of caffeine in 0.1% **AC WonderShroom**. Control wells were incubated with CM only and all conditions were tested in duplicate. Following an 18-hour incubation, the media in all wells was removed and cells were washed once with PBS. Hoechst and CellROX™ Orange were diluted in CM and added to all wells at final concentrations of 20 µM and 5 µM, respectively. Following a 30-minute incubation at 37°C, the Hoechst and CellROX™ Orange solution was removed, and cells were washed once with PBS. Next, 200 pM of Antimycin A (AntA), initially dissolved in ethanol and further diluted in CM, was added to all wells, except control wells that received CM. Following another 30-minute incubation at 37°C, the AntA and CM was removed, CM was added to all wells, and fluorescence measurements were taken with the following wavelengths (excitation / emission): Hoechst (361 nm / 486 nm) and CellROX™ Orange (545 nm / 565 nm).

Three separate experiments were performed with conditions in duplicate and average values were recorded. Data was analyzed using a one-way ANOVA with statistical significance accepted at $p \leq 0.05$. To account for differences in cell counts, ROS levels are expressed as the ROS Signal (CellROX™ Orange) divided by the Nuclear Signal (Hoechst), as calculated by the following equation:

$$ROS\ Levels = \frac{ROS\ Signal}{Nuclear\ Signal}$$

Percent change is expressed relative to AntA and calculated by the following equation:

$$Percent\ Change\ (\%) = \frac{RFU_{Sample} - RFU_{AntA}}{RFU_{AntA}} \times 100$$

Results

The data obtained from this study met criteria for a valid assay and the positive control performed as anticipated. Compared to untreated fibroblasts, AntA (200 pM) increased ROS levels. Fibroblasts treated with 0.0025% caffeine and **AC WonderShroom** at 0.01%, 0.05% and 0.1% exhibited a reduction in oxidative stress levels compared to fibroblasts exposed to AntA.

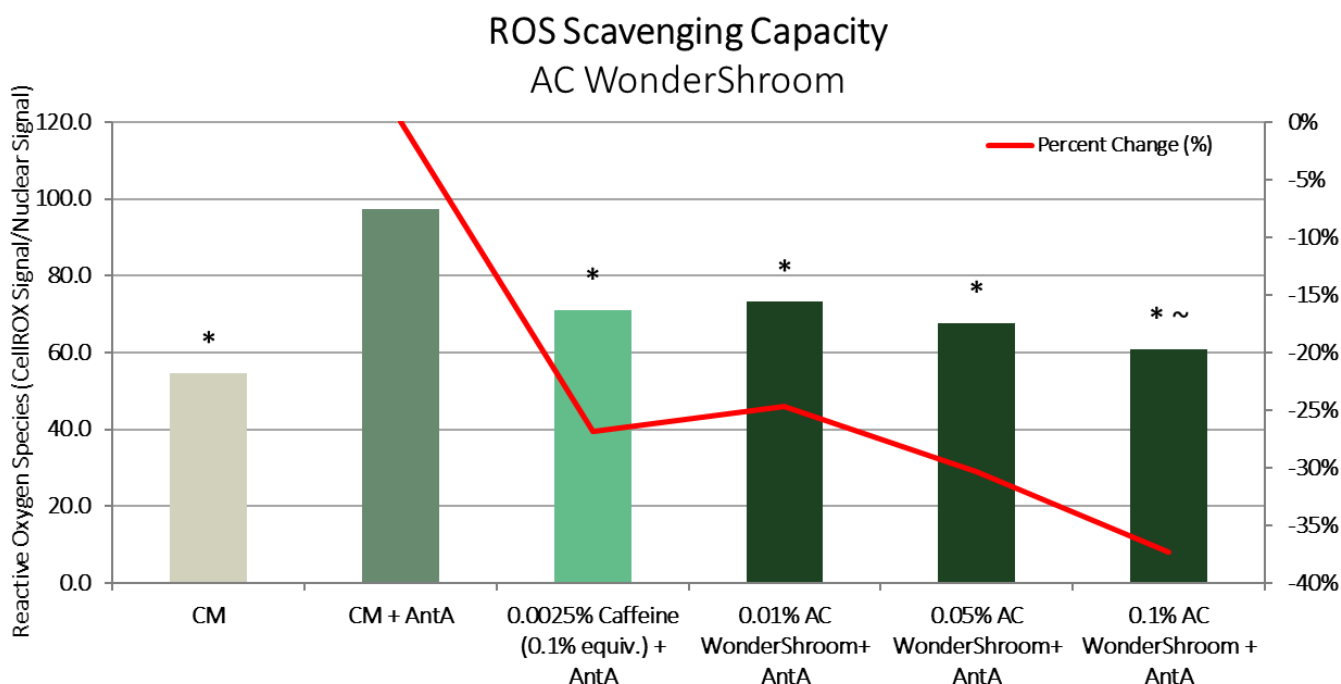


Figure 1. The effect of **AC WonderShroom** on ROS scavenging. * indicates significance ($p \leq 0.05$) compared to AntA treated fibroblasts. ~ indicates significance ($p \leq 0.05$) compared to Caffeine. 0.0025% caffeine is equivalent to the maximum standardized amount of caffeine in 0.1% **AC WonderShroom**.

Table 1. Results from one-way ANOVA Statistical Analysis. Results represent p-values between the two conditions compared. * indicates significance ($p \leq 0.05$) compared to AntA treated fibroblasts. ~ indicates significance ($p \leq 0.05$) compared to Caffeine.

	Complete Media	0.0025% Caffeine	0.01% AC WonderShroom	0.05% AC WonderShroom	0.1% AC WonderShroom
AntA	0.011*	0.007*	0.011*	0.006*	0.003*
0.0025% Caffeine	> 0.05	----	> 0.05	> 0.05	0.042~

Discussion

As shown in Figure 1, fibroblasts incubated with AntA, a known inducer of oxidative stress, elicited a 78% increase in ROS levels, compared to untreated fibroblasts. These data demonstrate the supraphysiologic level of ROS induced by AntA and the magnitude of ROS in fibroblasts is dynamic.

Conversely, fibroblasts treated with **AC WonderShroom** at 0.01%, 0.05%, and 0.1% demonstrated significant 25%, 30%, and 37% reductions in ROS levels compared to fibroblasts treated with AntA, respectively. Similarly, caffeine reduced ROS levels by 27% but was significantly less effective than the 0.1% concentration of **AC WonderShroom** (Table 1). These data demonstrate **AC WonderShroom** attenuates excessive oxidative stress.

Collectively, intrinsic and extrinsic factors perturb skin homeostasis by stimulating abundant levels of ROS that amplify DNA mutation, cellular senescence, advanced glycation end products, protein oxidation, and collagen degradation. These data indicate **AC WonderShroom** scavenges unnecessary ROS, which may help to attenuate characteristics of cellular aging.